





- Slipfitter (Knuckle) Mounting:
- Slide the slip fitter mount over the tenon bracket.
- Ensure that the power cord is not pinched when feeding through the tenon mount
- Remove cover and loosen bolt to adjust tilt angle on fixture
- When desired angle is reached tighten back up center bolt to secure the angle.
- Tighten the 2 grub set screws on the slip fitter to 15 ft-lbs to secure the slipfitter to the tenon
- Make wiring connections as below

